


# SNADI<sup>®</sup>

## User Manual

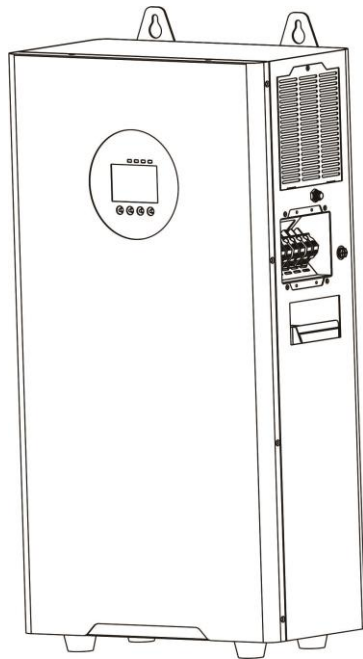

3.6KW  
INVERTER/MPPT SCC/AC CHARGER



# Table Of Contents

ABOUT THIS MANUAL.....	1
Purpose.....	1
Scope.....	1
SAFETY INSTRUCTIONS.....	1
INTRODUCTION.....	2
Features.....	2
Basic System Architecture.....	2
Product Overview.....	3
INSTALLATION.....	4
AC Input / Output Connection.....	4
PV Module Wire Connection.....	6
OPERATION.....	8
Power ON/OFF.....	8
Operation and Display Panel.....	10
LCD Display Icons.....	13
LCD Setting.....	13
Display Setting.....	23
Operating Mode Description.....	28
Error Reference Code.....	30
Warning Indicator.....	31
SPECIFICATIONS.....	32
Table 1 Utility Mode Specifications.....	32
Table 2 Inverter Mode Specifications.....	33
Table 3 Charge Mode Specifications.....	34
Table 4 General Specifications.....	34
TROUBLE SHOOTING.....	35

## ABOUT THIS MANUAL

### Purpose

This manual describes the assembly, installation, operation and troubleshooting of this unit. Please read this manual carefully before installations and operations. Keep this manual for future reference.

### Scope

This manual provides safety and installation guidelines as well as information on tools and wiring.

## SAFETY INSTRUCTIONS



**WARNING:** This chapter contains important safety and operating instructions.

**Read and keep this manual for future reference.**

1. Before using the unit, read all instructions and cautionary markings on the unit, the batteries and all appropriate sections of this manual.
2. Do not disassemble the unit. Take it to a qualified service center when service or repair is required. Incorrect re-assembly may result in a risk of electric shock or fire.
3. To reduce risk of electric shock, disconnect all wirings before attempting any maintenance or cleaning. Turning off the unit will not reduce this risk.
4. **CAUTION** – Only qualified personnel can install this device with battery.
5. NEVER charge a frozen battery.
6. For optimal operation of this inverter/ charger, please follow required spec to select appropriate cable size. It's very important to correctly operate this inverter/charger.
7. Be very cautious when working with metal tool son or around batteries. A potential risk exists to drop a tool to spark or short circuit batteries or other electrical parts and could cause an explosion.
8. Please strictly follow installation procedure when you want to disconnect AC or DC terminals. Please refer to INSTALLATION section of this manual for the details.
9. One piece of 150A fuse is provided as over-current protection for the battery supply.
10. GROUNDING INSTRUCTIONS -This inverter/charger should be connected to a permanent grounded wiring system. Be sure to comply with local requirements and regulation to install this inverter.
11. NEVER cause AC output and DC input short circuited. Do NOT connect to the utility when DC input short circuits.
12. **Warning!!** Only qualified service persons are able to service this device. If errors still persist after following trouble shooting table, please send this inverter/charger back to local dealer or service center for maintenance.
13. **WARNING:** Because this inverter is non-isolated, only three types of PV modules are acceptable: single crystalline, poly crystalline with class A-rated and CIGS modules. To avoid any malfunction, do not connect any PV modules with possible current leakage to the inverter. For example, grounded PV modules will cause current leakage to the inverter. When using CIGS modules, please be sure NO grounding.
14. **CAUTION**– It's requested to use PV junction box with surge protection. Otherwise, it will cause damage on inverter when lightning occurs on PV modules.

# INTRODUCTION

This is a multi-function inverter/charger, combining functions of inverter, solar charger and battery charger to offer uninterruptible power support with portable size. Its comprehensive LCD display offers user-configurable and easy-accessible button operation such as battery charging current, AC/solar charger priority, and acceptable input voltage based on different applications.

## Features

- Pure sine wave inverter
- Inverter running without battery
- Configurable input voltage range for home appliances and personal computers via LCD setting
- Configurable battery charging current based on applications via LCD setting
- Configurable AC/Solar Charger priority via LCD setting
- Compatible to mains voltage or generator power
- Auto restart while AC is recovering
- Overload/ Over temperature/ short circuit protection
- Smart battery charger design for optimized battery performance
- Cold start function

## Basic System Architecture

The following illustration shows basic application for this inverter/charger. It also includes following devices to have a complete running system:

- Generator or Utility.
- PV modules.

Consult with your system integrator for other possible system architectures depending on your requirements.

This inverter can power all kinds of appliances in home or office environment, including motor-type appliances such as tube light, fan, refrigerator and air conditioner.


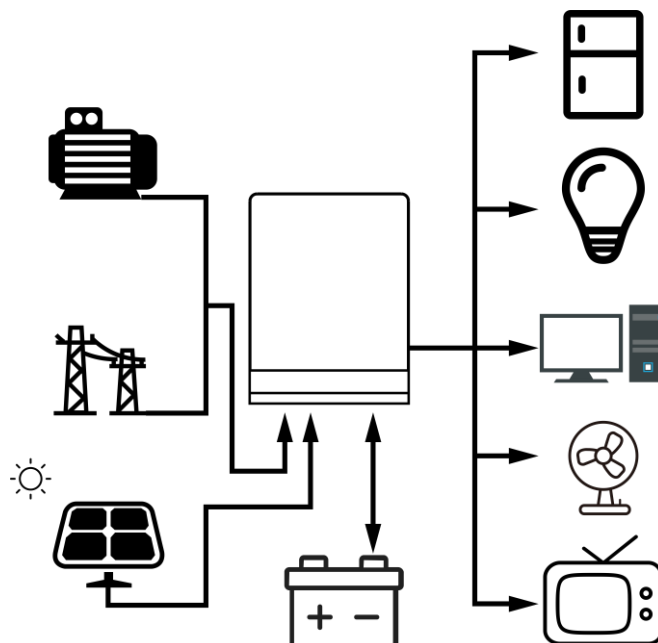


Figure 1 Hybrid Power System

## Product Overview

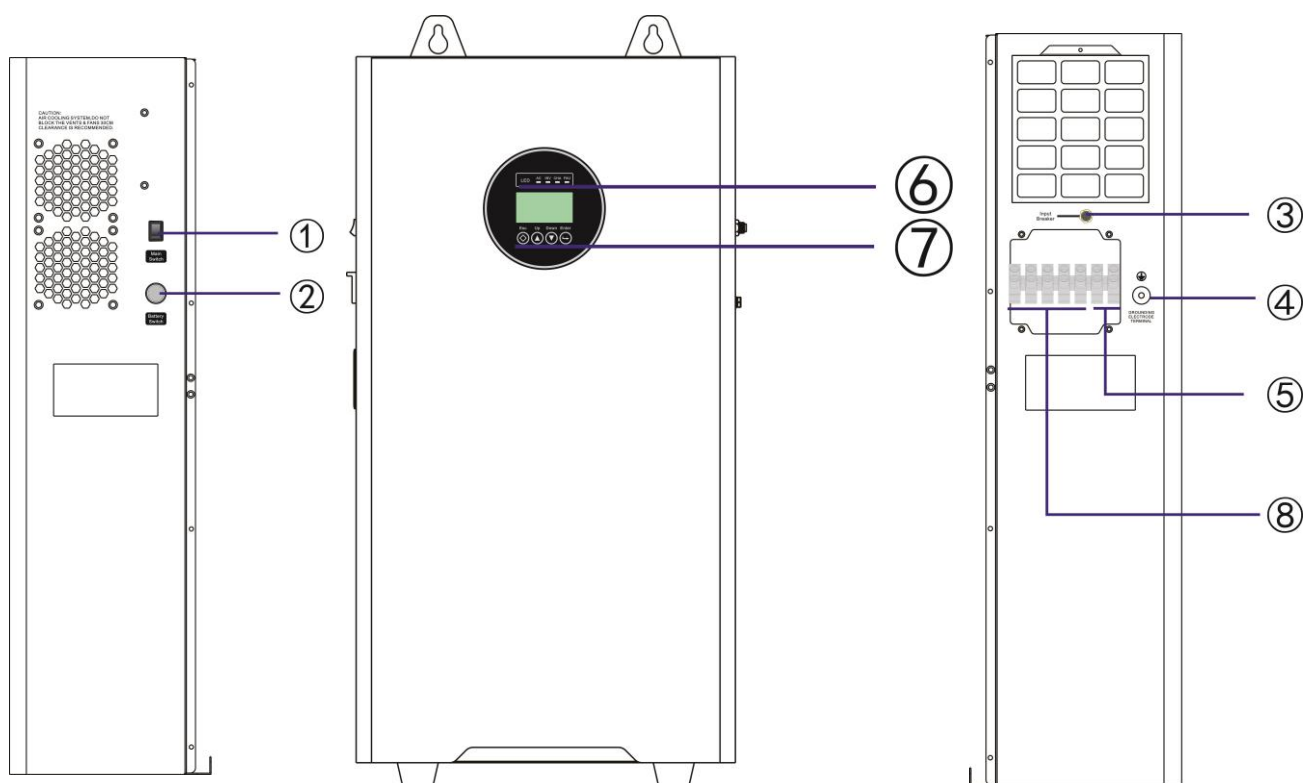

①-- Main Switch

②-- Battery Switch

③-- AC Input Breaker

④-- Grounding electrode terminal

⑤-- Solar Input port

⑥-- AC indicator, INV indicator, CHA indicator, FAU indicator

⑦-- Function buttons

⑧-- AC Input/AC output port

**AC Input / Output Connection**

**CAUTION!!** Before connecting to AC input power source, please install a separate AC breaker between inverter and AC input power source. This will ensure the inverter can be securely disconnected during maintenance and fully protected from over current of AC input. The recommended AC circuit breaker is 32A .

**CAUTION!!** There are two terminal blocks with “IN” and “OUT” markings. Do not mistakenly connect the input and output cables

**WARNING!** All wiring must be performed by a qualified personnel.

**WARNING!** It's very important for system safety and efficient operation to use appropriate cable for AC input connection. To reduce risk of injury, please use the proper recommended cable size as below.


**Suggested cable requirement for AC wires**

Model	Gauge	Cable (mm2)	Torque Value
3.6KW	12AWG	4	1.2 Nm

Please follow below steps to implement AC input/output connection:

1. Before making AC input/output connection, be sure to open DC protector or disconnecter first.
2. Insert AC input wires according to polarities indicated on terminal block and tighten the terminal screws .Be sure to connect PE protective conductor(⊕) first.

- ⊕ → **Ground (yellow-green)**
- L → **LIVE (brown or black)**
- N → **Neutral (blue)**

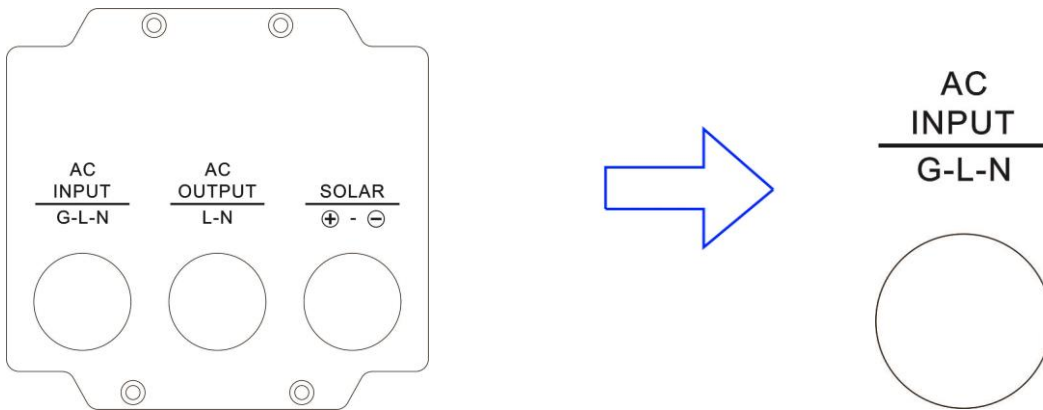


**WARNING:** Be sure that AC power source is disconnected before attempting to hardwire it to the unit.

1. Then insert AC output wires according to polarities indicated on terminal block and tighten terminal screws.

**L**→**LIVE (brown or black)**

**N**→**Neutral (blue)**

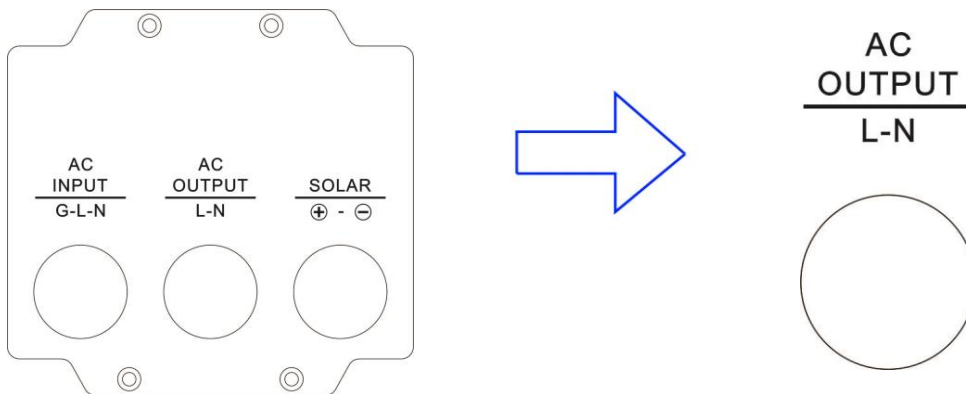

2. Make sure the wires are securely connected.

**CAUTION:** Appliances such as air conditioner are required at least 2~3 minutes to restart because it's required to have enough time to balance refrigerant gas inside of circuits. If a power shortage occurs and recovers in a short time, it will cause damage to your connected appliances. To prevent this kind of damage, please check manufacturer of air conditioner if it's equipped with time-delay function before installation. Otherwise, this inverter/charger will trig over load fault and cut off output to protect your appliance but sometimes it still causes internal damage to the air conditioner.

**PV Connection**

**CAUTION :**Before connecting to PV modules ,please install separately a DC circuit breaker between inverter and PV modules.

**WARNING!** It's very important for system safety and efficient operation to use appropriate cable for PV module connection. To reduce risk of injury, please use the proper recommended cable size as below.

Model	Wire Size	Cable(mm2)	Torque Value
3.6KW	1 x 12AWG	4	1.2 Nm

**WARNING:** Because this inverter is non-isolated, only three types of PV modules are acceptable: single crystalline, poly crystalline with class A-rated and CIGS modules. To avoid any malfunction, do not connect any PV modules with possible current leakage to the inverter. For example, grounded PV modules will cause current leakage to the inverter. When using CIGS modules, please be sure NO grounding.

**CAUTION:** It's requested to use PV junction box with surge protection. Otherwise, it will cause damage on inverter when lightning occurs on PV modules.

**PV Module Selection:**

When selecting proper PV modules, please be sure to consider below parameters:

1. Open circuit Voltage (Voc) of PV modules not exceeds max. PV array open circuit voltage of inverter.
2. Open circuit Voltage (Voc) of PV modules should be higher than min. battery voltage.
3. Voltage range of the photovoltaic module, as shown below.


INVERTER MODEL	3.6KW
Max. PV Array Open Circuit Voltage	450Vdc
PV Array MPPT Voltage Range	40Vdc~430Vdc
Maximum power of photovoltaic array	5000Wp

Take 375Wp PV module as an example. After considering above two parameters, the recommended module configurations are listed as below table.

Solar Panel Spec. (reference)	SOLAR INPUT	Qty of panels	Total input power
	(Min in serial: 4, max. in serial: 10)		
- 375Wp Vm:34.4Vdc Im:10.9A Voc:41.2Vdc Isc:11.4A	8 series and 1 parallel-3.6KW	8 pcs	3000W
	5 series and 2 parallel-3.6KW	10 pcs	3750W
	6 series and 2 parallel-3.6KW	12 pcs	4550W


## PV Module Wire Connection

Check correct polarity of wire connection from PV modules and PV input connectors. Then connect positive pole (+) of connection wire to positive pole (+) of PV input connector. Connect negative pole (-) of connection wire to negative pole (-) of PV input connector. Screw two wires tightly in clockwise direction. Recommended tool: 4mm blade screwdriver.

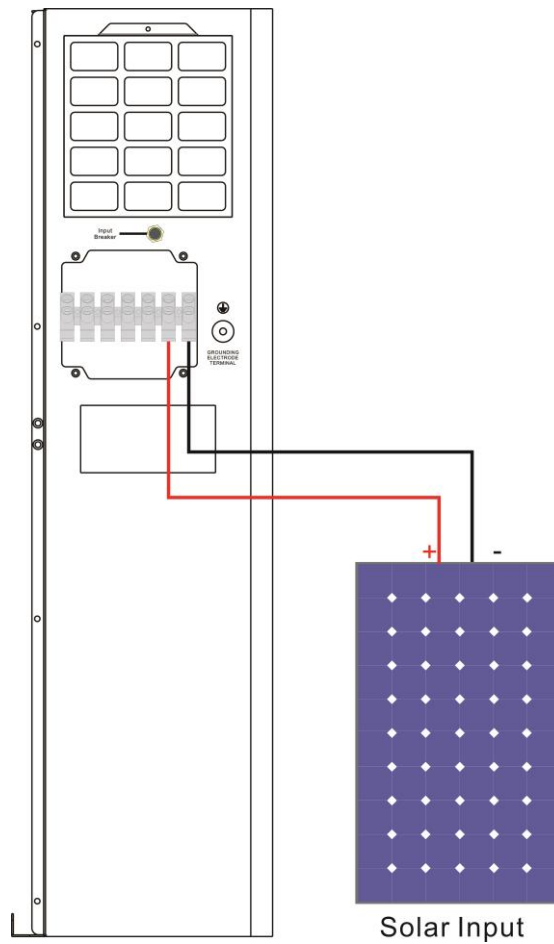

# OPERATION

## Power ON/OFF

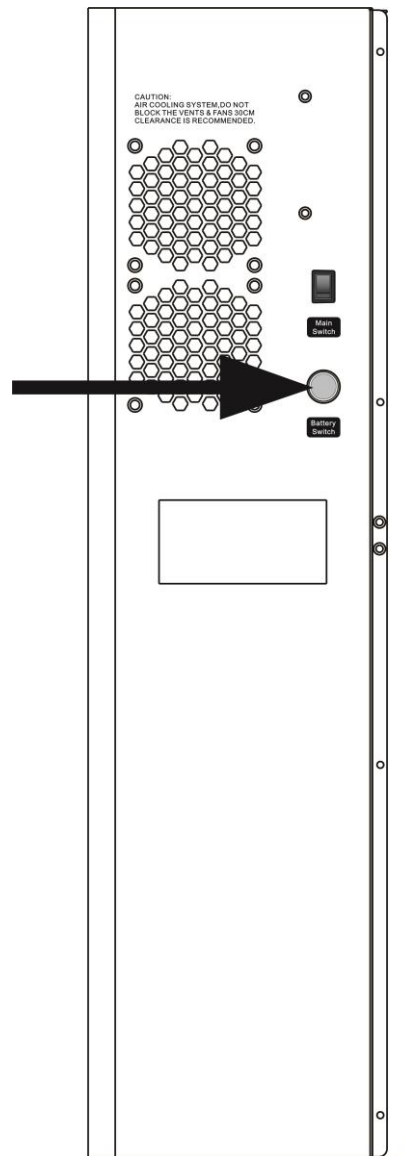

Once the unit has been properly installed and the batteries are connected well ,simply press On/Off switch (located on the button of the case) to turn on the equipment.

## Operation and Display Panel

The operation and display panel, shown in below chart, is on the front panel of the inverter. It includes four indicators, four function keys and a LCD display, indicating the operating status and input/output power information.




### LED Indicator

LED Indicator		Messages	
AC	Green	Solid On	The utility is normal and the utility is working
		Flashing	The utility is normal, but the utility is not working
		Slake	Utility abnormal
INV	Yellow	Solid On	The machine works in battery mode output
		Flashing	Other states
CHA	Yellow	Solid On	The battery is on floating charging
		Flashing	The battery charged at constant voltage
		Slake	Other states
FAU	Red	Solid On	Fault occurs in the inverter.
		Flashing	Warning condition occurs in the inverter.
		Slake	Inverter normal

### Function Keys

Function Key	Description
ESC	To exit setting mode
UP	To go to previous selection
DOWN	To go to next selection
ENTER	To confirm the selection in setting mode or enter setting mode

## LCD Display Icons

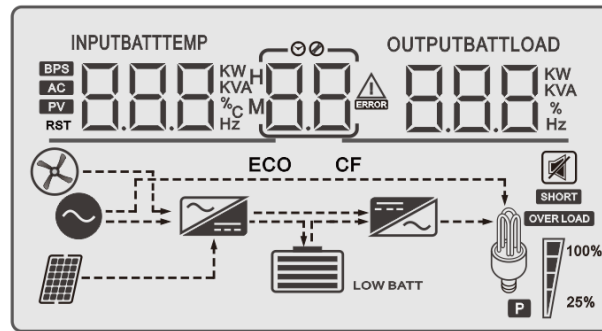

Icon	Function description
<b>Input Source Information</b>	
	Indicates the AC input.
	Indicates the PV input
	Indicate input voltage, input frequency, PV voltage, charger current (PV charging), charger power, battery voltage.
<b>Configuration Program and Fault Information</b>	
	Indicates the setting programs.
	Indicates the warning and error codes.
	Warning: flashing with warning code.
	Error: lighting with fault code
<b>Output Information</b>	
	Indicate output voltage, output frequency, load percent, load in VA, load in Watt and discharging current.

### Battery Information























Indicates battery level by 0-24%, 25-49%, 50-74% and 75-100% in battery mode and charging status in line mode.

In AC mode, it will present battery charging status.

Status	Battery voltage	LCD Display
Constant Current mode / Constant Voltage mode	<2V/cell	4 bars will flash in turns.
	2 ~ 2.083V/cell	Bottom bar will be on and the other three bars will flash in turns.
	2.083 ~ 2.167V/cell	Bottom two bars will be on and the other two bars will flash in turns.
	> 2.167 V/cell	Bottom three bars will be on and the top bar will flash.
Floating mode. Batteries are fully charged.		4 bars will be on.

In battery mode, it will present battery capacity

Load Percentage	Battery Voltage	LCD Display
Load >50%	< 1.85V/cell	
	1.85V/cell ~ 1.933V/cell	
	1.933V/cell ~ 2.017V/cell	
	> 2.017V/cell	
Load < 50%	< 1.892V/cell	
	1.892V/cell ~ 1.975V/cell	
	1.975V/cell ~ 2.058V/cell	
	> 2.058V/cell	

Load Information				
	Indicates overload			
	Indicates the load level by 0-24%, 25-49%, 50-74% and 75-100%.			
	0%~24%	25%~49%	50%~74%	75%~100%
				
Mode Operation Information				
	Indicates unit connects to the utility.			
	Indicates unit connects to the PV panel.			
	Indicates load is supplied by utility power.			
	Indicates the utility charger circuit is working.			
	Indicates the DC/AC inverter circuit is working.			
Mute Operation				
	Indicates unit alarm is disabled.			

## LCD Setting

After pressing and holding ENTER button for 3seconds,the unit will enter setting mode.

Press “UP” or “DOWN” button to select setting programs. And then, press “ENTER” button to confirm the selection or ESC button to exit.

### Setting Programs:

Program	Description	Selectable option	
01	Output voltage	208V OPU 01 208 <sub>v</sub>	220V OPU 01 220 <sub>v</sub>
		230V (default) OPU 01 230 <sub>v</sub>	240V OPU 01 240 <sub>v</sub>
02	Output frequency	50Hz (default) OPF 02 50 <sub>Hz</sub>	60Hz OPF 02 60 <sub>Hz</sub>
		This parameter can be set in the standby or mains bypass mode. Restart takes effect	
03	Output source priority	GRD Utility priority (default) OPP 03 GRD	Utility will provide power to the loads as first priority . Solar and battery energy will provide power to the loads only when utility power is not available.
		PV Solar priority OPP 03 PV	The PV module preferentially supplies power to the load . When the photovoltaic modules are not powerful enough to power all the loads, the mains supply power to the loads at the same time. When mains power is unavailable, both the PV modules and the batteries provide power to the load. Logic diagram: PV > Grid > BAT
		PBG priority OPP 03 PBG	The PV module preferentially supplies power to the load . When the photovoltaic modules are not powerful enough to power all the loads, the battery supplies power to the loads at the same time. The mains will power the load as the first priority only when the battery voltage drops to the low voltage alarm value or the value set in program 15. Logic diagram: PV > BAT > Grid

04	Output mode	Appliance(default) n0d 04 APP	Used for household appliances.
		UPS n0d 04 UPS	Used for equipment such as computers.
05	Setting the charger priority	If this inverter/charger is working in Utility, Standby or Error mode, the charger priority can be programmed as follows:	
		GRD Utility priority CHP 05 0fd	Both the mains and the photovoltaic modules charge the battery.
		PV Solar priority CHP 05 PU	Solar energy will charge battery as first priority .Utility will charge battery only when solar energy is not available.
		PNG Solar and Utility (default) CHP 05 PNG	The photovoltaic module is preferred to charge the battery, and the lack of charging energy is made up by the mains electricity.
		OPV Only Solar CHP 05 OPU	Solar energy will be the only charger source no matter utility is available or not.
		When the inverter is operating in battery mode or energy saving mode, only the photovoltaic module charges the battery, and the battery is charged only when the photovoltaic module is fully powered.	

06	Utility charging current Note: If setting value in program 07 is smaller than that in program in 06, the inverter will apply charging current from program 07 for utility charger. (3.6KW is 2A-100A)	2A ACC 06 2 <sup>A</sup>	10A ACC 06 10 <sup>A</sup>
		20A ACC 06 20 <sup>A</sup>	30A ACC 06 30 <sup>A</sup>
		40A (3.6KW default) ACC 06 40 <sup>A</sup>	50A ACC 06 50 <sup>A</sup>
		60A ACC 06 60 <sup>A</sup>	70A ACC 06 70 <sup>A</sup>
		80A ACC 06 80 <sup>A</sup>	100A ACC 06 100 <sup>A</sup>
07	Maximum charging current: To configure total charging current for solar and utility chargers. (Max . charging current= utility charging current + solar charging current) (3.6KW is 2A-100A)	2A ACC 07 2 <sup>A</sup>	10A ACC 07 10 <sup>A</sup>
		20A ACC 07 20 <sup>A</sup>	30A ACC 07 30 <sup>A</sup>
		40A ACC 07 40 <sup>A</sup>	50A ACC 07 50 <sup>A</sup>
		60A (default) ACC 07 60 <sup>A</sup>	70A ACC 07 70 <sup>A</sup>
		80A ACC 07 80 <sup>A</sup>	90A ACC 07 90 <sup>A</sup>
		100A ACC 07 100 <sup>A</sup>	

08	Display interface Settings:	Return to default display screen (default) ndF 08 ON	If selected, no matter how users switch display screen, it will automatically return to default display screen (Input voltage / output voltage) after no button is pressed for 1 minute.
		Stay in the current display interface ndF 08 OFF	If selected, the display screen will stay at latest screen user finally switches.
09	Auto restart when overload occurs	Restart disable LFS 09 OFF	Restart enable(default) LFS 09 ON
10	Auto restart when over temperature occurs	Restart disable LFS 10 OFF	Restart enable(default) LFS 10 ON
11	Beeps while primary source is interrupted	Alarm on (default) n1P 11 ON	Alarm off n1P 11 OFF
12	Energy-saving mode	When battery constant voltage charging is set to ON and the load is lower than 25W in battery mode, the system stops output for a short time and then continues output. If the load is higher than 35W, the system returns to normal output	
		On PUS 12 ON	Off (default) PUS 12 OFF
13	Overload bypass: If the device is overloaded in battery mode, the device switches to the utility mode.	Bypass disable (default) OLG 13 OFF	Bypass enable OLG 13 ON
14	Alarm control	Alarm on nUt 14 ON	Alarm off (default) nUt 14 OFF
15	Setting voltage point back to utility source when selecting "SBU priority" in program 03.	3.6KW default setting: 23.0V bLG 15 23.0	
		When the battery and the mains exist at the same time, the battery will be transferred to the mains at a certain voltage to ensure that the battery will not empty .Setting range is from 22.0V to 26.0V for 3KW model.	

16	Setting voltage point back to battery mode when selecting "SBU priority" in program 03.	3.6KW default setting: 26.0V bat 16 26.0v	
		When the battery is powered off at low voltage, only when the battery voltage reaches a certain value, inverter can restart the battery mode. Setting range is from 24.0V to 29.0V for 3KW model. Increment of each click is 0.1V.	
17	Battery type	AGM (default) Lead-acid battery bat 17 AGM	FID (Flooded) bat 17 FLD
		CUS User-Defined bat 17 CUS	LIB(Lithium battery) bat 17 LIB
		If "User-Defined" is selected, Battery voltage parameters can be set in programs 18, 19, 20, and 21.	
18	Battery low voltage alarm	3.6KW default setting: 21.6V BAL 18 21.6v	
		If self-defined is selected in program 17, this program can be set up. Setting range is from 21V to 27V for 3.6KW model.	
19	Battery low voltage protection voltage	3.6KW default setting: 21.0V BAU 19 21.0v	
		If self-defined is selected in program 17, this program can be set up. Setting range is from 24.0V to 29.0V for 3.6KW model.	
20	Constant charging voltage of the battery	(The constant voltage should be greater than the floating charging voltage)	
		3.6KW default setting: 28.2V BCV 20 28.2v	
		If self-defined is selected in program 17, this program can be set up. Setting range is from 24.0V to 29.0V for 3.6KW model.	
21	Floating charging voltage	3.6KW default setting: 27.0V BFL 21 27.0v	
		If self-defined is selected in program 17, this program can be set up. Setting range is from 26.6V to 27.8V for 3.6KW model.	

22	Utility low voltage protection	Default setting: 154V LLV 22 154V	
		Setting range is from 90V to 154V. Increment of each click is 1V.	
23	Utility high voltage protection	Default setting: 264V LHV 23 264V	
		Setting range is from 264V to 280V. Increment of each click is 1V.	
24	Low power discharge time setting	Default setting: 8H Lud 24 8	
		Setting range is from 1H to 8H. Increment of each click is 1V. In reserved battery mode, if not reached the battery shutdown point after the duration exceeds the set hour, the system changes the battery shutdown point to 11V x the number of batteries. If the battery discharge reaches 11V x the number of batteries, the system alarms for 1 minute before shutting down. If the battery voltage exceeds 13.2V x the number of batteries exceeds 30 seconds, the battery discharge time is reset.	
25	Soft start setting of Inverter	On StE 25 ON	Off (default) StE 25 OFF
		When set to ON, the inverter output gradually increases from 0 to the target voltage. When set to OFF, the inverter output increases directly from 0 to the target voltage value.	
26	Restore the default values	On Std 26 ON	Off (default) Std 26 OFF
		(Mains and standby modes can be set and take effect immediately, battery mode cannot be set.)	

27	Parallel mode setting	When using the parallel function, connect the parallel system in the correct way, and then set the parallel mode of each device correctly. If there is a device set to SIG in the parallel system, the device reports fault 20. If there are devices set to 3P1, 3P2, or 3P3 in the parallel system, all devices must be set to one of these three modes, and at least one device exists in each mode, otherwise all devices set to these three modes report error 20.	
		SIG default (single phase mode) PARn 27 SIG	PAR (single phase parallel mode) PARn 27 PAR
		3P1(R phase mode) PARn 27 3P1	3P2(S phase mode) PARn 27 3P2
		3P3(T phase mode) PARn 27 3P3	
		(Mains and standby mode can be set and take effect immediately, battery mode cannot be set) After the setting and merging are successful, a single device cannot be turned on, and it can be turned on only after undoing the parallel	
28	Battery missed alarm	ON SbA 28 ON	OFF (default) SbA 28 OFF
		Set to OFF, when the battery is not connected, there will be no battery missed, battery low voltage, battery undervoltage alarm.	
29	Equilibrium mode	ON EQn 29 ON	OFF(default) EQn 29 OFF
		The default setting is OFF, and the function is not enabled; set to ON, when the equalization interval (battery equalization cycle) is set during the floating charge phase, or when equalization is immediately activated, the controller will begin to enter the equalization phase.	
30	Equalization voltage point setting	3.6KW defaults 29.2V and 25V-31.5V can be set EQV 30 29.2v	

31	Equalization charging time setting	<p>The default setting is 60 minutes, the range can be set from 5 to 900, and the increment is 5 minutes at a time.</p> <p style="text-align: center;">E9L 31 060</p>
		<p>In the equalization charging stage, the inverter will charge the battery as much as possible, and only after completing the set equalization charging time will it return to the floating charging stage.</p>
32	Equalization delay charging time setting	<p>The default setting is 120 minutes, but the setting range is 5-900, and the increment is 5 minutes at a time.</p> <p style="text-align: center;">E90 32 120</p>
		<p>In the equalization charging stage, after the battery equalization charging time is completed, if the voltage rises to the battery equalization voltage point, the inverter does not perform equalization delay charging time and directly returns to the floating charge stage. If the voltage does not rise to the battery equalization voltage point, the inverter will perform equalization delay charging time. During the equalization delay charging time, the voltage rises to the battery equalization voltage point and immediately returns to the floating charging stage. If it does not rise to the battery equalizing voltage point, it returns to the floating charging stage after completing the set equalizing delayed charging time.</p>
33	Equalization charging interval setting	<p>The default setting is 30 days, the range can be set from 1 to 90, and the increment is 1 day at a time.</p> <p style="text-align: center;">E91 33 30d</p>
		<p>In the floating charging phase when the equalizing charging mode is turned on, when the battery is detected, the inverter will start to enter the equalizing phase when the set equalizing interval (battery equalizing period) is reached.</p>
34	Turn on the equilibrium mode immediately	<p>The default setting is OFF, and the function is not enabled; when set to ON, when the floating charge phase in equalization mode is turned on and battery access is detected, the equalization charge is activated immediately and the controller will begin to enter the equalization phase.</p> <p style="text-align: center;">E97 34 OFF</p>






35	On-grid inverter function (reserved)	ON 061 35 0N	OFF (default) 061 35 OFF
		Set whether the inverter is grid-connected to feed power in PV priority mains mode or PBG mains mode. The default setting is OFF, and the function is not enabled; when it is set to ON, the inverter conducts maximum power point tracking, and the excess energy is fed into the mains. After the function is enabled, if a communication abnormality occurs, an alarm 56 will be generated, and the inverter will no longer determine the operation logic based on the BMS information.	
36	Battery dual output low voltage shutdown point (reserved)	3.6KW defaults to 24.0V, and the range can be set to 22V-30V. 064 36 240 <sub>v</sub>	
		When enabled, the secondary output of the inverter is enabled by default. After entering the battery mode, when the battery voltage is lower than the set point, the secondary output is turned off. When the battery voltage is higher than the set value + 1V/cell again, the secondary output is turned on.	
37	Battery dual output duration (reserved)	3.6KW is OFF by default, the function is not enabled, and the range can be set from 5 to 899 minutes. 064 37 060	
		When enabled, the secondary output of the inverter is enabled by default. After entering the battery mode, when the battery discharge time reaches the set point, the secondary output will be turned off. When it is set to FUL, the output time of the secondary output is not limited.	
38	BMS communication function  This function needs to be used in conjunction with the central control board.	OFF (default) 065 38 OFF	Voltronic Communication 065 38 VOL
		Growatt Communication 065 38 GTO	Pylontech Communication 065 38 PYL
		Iron tower Communication 065 38 ITO	
		The default setting is OFF, and the function is not enabled. When it is set to ON, the inverter communicates with the lithium battery BMS through the central control board, and obtains battery information. After the function is enabled, if there is a communication abnormality, an alarm 56 will be generated, and the inverter will no longer determine the operation logic based on the BMS information.	





39	<p>Low SOC Shutdown Function (SBU)</p> <p>This function needs to be used in conjunction with the central control board.</p>	<p>The default setting is 20, the setting range is [5,50], and it can be set to OFF.</p> <p style="text-align: center;">655 39 OFF</p>
		<p>In battery mode, when the lithium battery SOC reaches the set value, it will shut down and alarm 68 will be issued at the same time, and alarm 68 will be cleared when it returns to the set value + 5%. When in standby mode, it will enter battery mode only when it reaches the set value + 10%, and it will alarm 69 if it is not reached. After the function is turned on, when the lithium battery SOC reaches the set value + 5%, the alarm 69 will be issued, and the alarm 69 will be cleared when it returns to the set value + 10%. It can be set to OFF. At this time, the inverter will no longer perform shutdown, startup, and alarm operations according to the SOC situation. After the function is enabled, if a communication abnormality occurs, the inverter will no longer determine the operation logic based on the SOC information, and clear the relevant alarm.</p>
40	<p>High SOC to battery function</p> <p>This function needs to be used in conjunction with the central control board.</p>	<p>The default setting is 90, and the settable range is [10,100]. Can be set to OFF.</p> <p style="text-align: center;">566 90 OFF</p>
		<p>PBG priority mains normal mains mode, switch to battery mode when the lithium battery SOC reaches the set value. When turned on, the inverter will switch to battery mode only when the SOC is higher than the set point and the battery voltage is higher than the switch back to battery mode voltage point (see item 15). It can be set to OFF. At this time, the inverter will no longer switch from mains mode to battery mode according to the SOC situation. After the function is enabled, if a communication abnormality occurs, the inverter will no longer determine the operation logic based on the SOC information, and clear the relevant alarm.</p>
41	<p>Low SOC to mains grid function (STG)</p> <p>This function needs to be used in conjunction with the central control board.</p>	<p>The default setting is 50, and the settable range is [10,90]. Can be set to OFF.</p> <p style="text-align: center;">560 50 OFF</p>
		<p>In PBG priority mains normal battery mode, switch to mains mode when the lithium battery SOC reaches the set value. After it is turned on, when the SOC is lower than the set point or the battery voltage is lower than the return-to-mains voltage point (see item 15), the inverter will switch to the mains mode. It can be set to OFF. At this time, the inverter will no longer switch from battery mode to mains mode according to the SOC situation.</p>





## Display Setting



The LCD display information will be switched in turns by pressing “UP” or “DOWN” key. Includes: input/output voltage, input/output frequency, battery voltage/charging current, PV voltage/charging current, PV charging power, output active power, output apparent power, main CPU version, etc.

Selectable information	LCD display
Input voltage/Output voltage (Default Display Screen)	<p>Input Voltage=230V, output voltage=230V</p>
Input frequency/ Output frequency	<p>Input frequency=50Hz, Output frequency=50Hz</p>
Battery voltage and charging current	<p>Battery voltage=25.5V, charging current =1A</p>
PV voltage and PV charging current	<p>PV voltage=260V, PV charging current =10A</p>
PV voltage and PV charging current	<p>When the PV charging power is lower than 1kW, the Pv charging power in unit of W will present xxx W like below chart</p>
	<p>When PV charging power is higher than 1kW (<math>\geq 1kW</math>), the PV charging power will present xx KW like below chart</p>

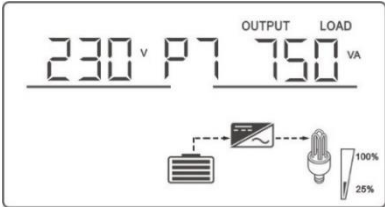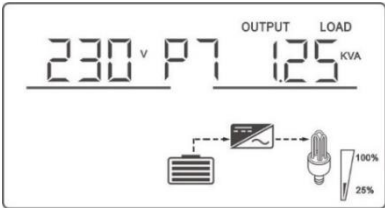

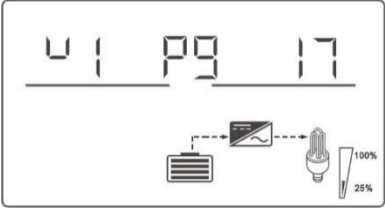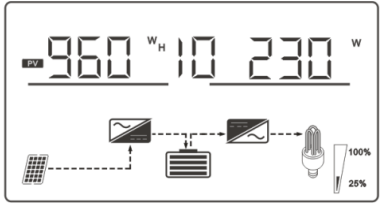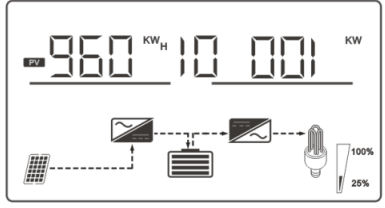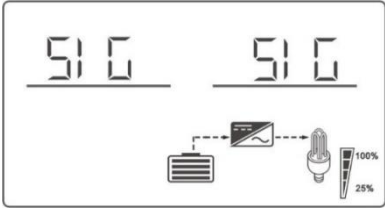

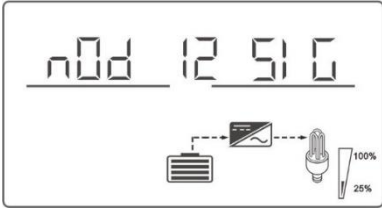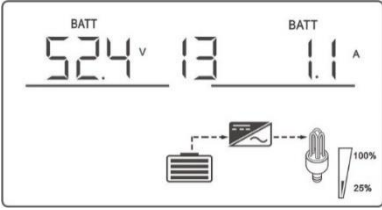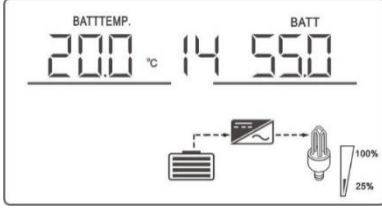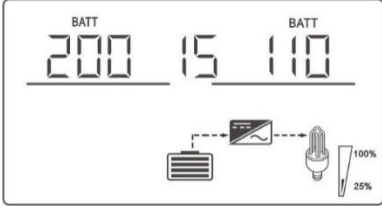
<p>Output voltage/output active power</p>	<p>When load is lower than 1kW, load in W will present xxx W like below chart.</p> 
	<p>When load is larger than 1kW (<math>\geq 1\text{KW}</math>), load in W will present x.x kW like below chart.</p> 
<p>Output voltage/output apparent power</p>	<p>When connected load is lower than 1kVA, load in VA will present xxx VA like below chart.</p> 
	<p>When load is larger than 1kVA (<math>\geq 1\text{KVA}</math>), load in VA will present x.x kVA like below chart.</p> 
<p>Load percentage</p>	<p>Load percent=81%</p> 



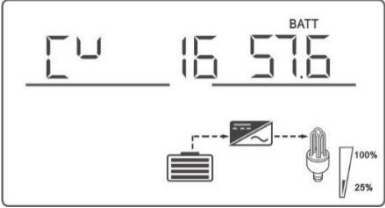
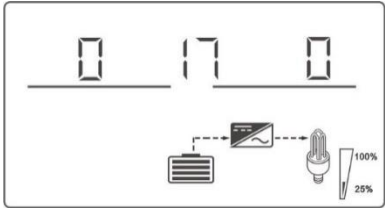





<p>Main CPU version checking</p>	<p>Main CPU version 00017.04</p> 
<p>Pv cumulative power generation and Pv daily power generation</p>	<p>On the left is Pv cumulative power generation, and on the right is Pv power generation on the same day. When Pv generation of that day (&lt;1KWH), Pv cumulative power generation in WH will display xxWH; Generation power per Pv day (&lt;1KW), the Pv generation power of the day in W will be displayed xxW.</p>  <p>On the left is Pv cumulative power generation, and on the right is Pv power generation on the same day. When Pv generation of that day (<math>\geq 1</math>KWH), Pv cumulative power generation in WH will display xxKWH; Generation power per Pv day (<math>\geq 1</math>KW), the Pv generation power of the day in W will be displayed xxKW.</p> 
<p>Reserved</p>	<p>Reserved</p> 

<p>Lithium battery networking status</p>	<p>When the right display is SIG, the battery pack is running in a single group; when it is displayed as flashing, the battery pack is establishing a multi-group series-parallel state.</p> 
<p>Information of lithium battery battery voltage &amp; current</p>	<p>The left side shows the BMS battery voltage information; the right side shows the BMS battery current information. When the BMS communication fails, the upper left and upper right are displayed as flashing ERR.</p> 
<p>Lithium battery battery temperature, SOC</p>	<p>The battery temperature information is displayed on the left; the battery SOC information is displayed on the right. When the BMS communication fails, the left and right sides are displayed as flashing ERR.</p> 
<p>Lithium battery battery capacity</p>	<p>The left shows the rated capacity; the right shows the current capacity. When the BMS communication fails, the left and right sides are displayed as flashing ERR.</p> 







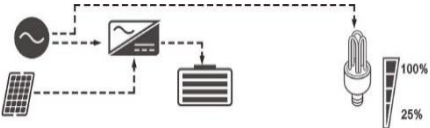


















<p>Lithium battery constant voltage point</p>	<p>The left side shows the fixed letter CV; the right side shows the BMS constant voltage charging point. When the BMS communication fails, the flashing ERR is displayed on the right.</p>  <p>The image shows a rectangular LCD display. At the top right, the word 'BATT' is displayed. The main display area shows 'CV' on the left, '16' in the middle, and '576' on the right. Below the display, there are three icons: a battery pack, a light bulb, and a vertical bar with '100%' and '25%' labels.</p>
<p>Lithium battery fault warning information</p>	<p>The left side shows BMS alarm information; the right side shows BMS failure information. When the BMS communication fails, the left and right sides are displayed as flashing ERR</p>  <p>The image shows a rectangular LCD display. The main display area shows '0' on the left, '17' in the middle, and '0' on the right. Below the display, there are three icons: a battery pack, a light bulb, and a vertical bar with '100%' and '25%' labels.</p>

## Operating Mode Description






















Operation mode	Description	LCD display
Standby mode <b>Note:</b> *Standby mode: The inverter is not turned on yet but at this time, the inverter can charge battery without AC output.	Charging by utility and PV energy.	
	Charging by utility.	
	Charging by PV energy.	
	No being charging.	
Error mode <b>Note:</b> *Error mode: Errors are caused by inside circuit error or external reasons such as over temperature, output short circuited and soon.	No output and no charge.	

Operation mode	Description	LCD display
<p>Utility Mode</p> <p><b>Note:</b> Utility mode: When the inverter is started, it supplies power to loads in mains mode.</p>	<p>The utility supplies power to the load while charging the battery, and the photovoltaic modules charge the battery.</p>	
	<p>The utility provides power to the load as well as charging the battery.</p>	
	<p>Select PV as the output priority and add batteries. If the PV module power is insufficient to provide power for all loads, the utility supply power to the loads.</p>	
	<p>Select PV as the output priority and do not connect batteries. If the power of the PV modules is insufficient to provide power for all loads, the utility supplies power to the loads. They don't charge the battery.</p>	
	<p>The utility provides power to the load but does not charge the battery.</p>	
<p>Battery Mode</p> <p><b>Note:</b> Battery mode: When the inverter is started, the batteries and photovoltaic modules provide power to the load.</p>	<p>Power from battery and PV modules.</p>	
	<p>PV modules will supply power to the loads and charge battery at the same time.</p>	
	<p>Power from battery only.</p>	
	<p>Power from PV modules only.</p>	

## Error Reference Code

Error Code	Error Event	Icon
01	Bus boost soft start failed	
02	Bus over-voltage	
03	Bus under-voltage	
04	over-current	
05	Over temperature	
06	Battery over-voltage	
07	Bus soft start error	
08	Bus short circuit	
09	INV soft start error	
10	INV over-voltage	
11	INV under-voltage	
12	INV short circuit	
13	Negative power protection	
14	Over-load error	
15	Model error	
16	No boot loader	
17	PV program burning	
19	Same serial number	
20	CAN communication error	
21	The battery voltage difference is too large.	
22	Input voltage difference is too large	
23	Input voltage frequency difference	
24	The output mode setting is abnormal	
25	Output out of sync	
26	BMS Trouble	

## Warning Indicator

Warning Code	Warning Event	Icon flashing
50	Battery disconnected	
51	Battery under-voltage shutdown	
52	Battery under-voltage	
53	Battery charge short circuit	
54	Low power discharge	
55	Battery over-charge	
56	BMS lost	
57	Over temperature	
58	Fan error	
59	EEPROM fail	
60	Overload	
61	Abnormal generator waveform	
62	PV energy is weak.	
63	Synchronization loss	
64	Parallel settings are not compatible	
65	The parallel version is not compatible.	
66	Communication error of parallel equipment	
67	There are differences in parallel power supply.	
68	Low SOC shutdown	
69	Low SOC	
70	Battery a Source Fail	

# SPECIFICATIONS

Table 1 Utility Mode Specifications

INVERTER MODEL	NLB-3.6KW
Input Voltage Waveform	Pure sine wave (utility or generator)
Input Voltage range (configurable)	170VAC~280VAC (UPS Mode) 120VAC~280VAC (INV Mode)
Utility low voltage transfer point	170Vac±7V (UPS); 90Vac±7V (Appliances)
Utility low voltage return point	180Vac±7V (UPS); 100Vac±7V (Appliances)
Utility high voltage transfer point	280Vac±7V
Utility high voltage return point	270Vac±7V
Max AC Input Voltage	300Vac
Rated Input Frequency	50Hz / 60Hz (Auto detection)
Lowest frequency conversion point	40±1Hz
Highest frequency conversion point	42±1Hz
Highest frequency return point	65±1Hz
High Loss Return Frequency	63±1Hz
Output Short Circuit Protection	Utility mode: Circuit breaker Battery mode: Circuit protection
Efficiency (Utility Mode)	>95% ( Rated R load, battery full charged )
Transfer Time	10ms
Output power derating: When AC input voltage drops to 170V, the output power will decrease.	<p>Output Power</p> <p>Rated Power</p> <p>50% Power</p> <p>Input Voltage</p> <p>90V 170V 280V</p>

Table 2 Inverter Mode Specifications

INVERTER MODEL	NLB-3.6KW
Rated Output Power	3.6KW
Output Voltage Waveform	Pure Sine Wave
Rated output voltage (configurable)	208/220/230/240Vac±5%
Output Frequency	50Hz
Peak Efficiency	93%
Overload Protection	102%-110%/1min; 110%-130%/10s; 130%-150%/3s; > 150%/0.2s
Surge Capacity	2* rated power for 5 seconds
Rated DC Input Voltage	24Vdc
Cold Start Voltage	23.0Vdc
Low DC Warning Voltage @ load < 50% @ load ≥ 50%	23.0Vdc 22.0Vdc
Low DC Warning Return Voltage @ load < 50% @ load ≥ 50%	23.5Vdc 23.0Vdc
Low DC Protection Voltage @ load < 50% @ load ≥ 50%	21.5Vdc 21.0Vdc
High DC Recovery Voltage	31Vdc
High DC Protection Voltage	31.5Vdc
No Load Power Consumption	62W

Table 3 Charge Mode Specifications

Utility Charging Mode	
<b>INVERTER MODEL</b>	NLB-3.6KW
Charging Algorithm	3-Step
AC Charging Current (Max)	100Amp (@VI/P=230Vac)
Charging voltage (Flooded Battery)	29.2Vdc
Charging voltage (AGM / Gel Battery)	28.2Vdc
Floating Charging Voltage	27Vdc
Photovoltaic charging mode	
<b>INVERTER MODEL</b>	NLB-3.6KW
Max. PV Array Power	5000W
Starting Voltage	150Vdc +/- 10Vdc
PV Array MPPT Voltage Range	40-430Vdc
Max. PV Array Open Circuit Voltage	450Vdc
Max Charging Current (AC charger plus solar charger)	100Amp

Table 4 General Specifications

<b>INVERTER MODEL</b>	NLB-3.6KW
In-built battery specification	166AH/25.6V
Operating Temperature Range	-10°C to 50°C
Storage temperature	-15°C~ 60°C
Humidity	5% to 95% Relative Humidity (Non-condensing)
Dimension (D*W*H), mm	387*104*752
Packing size (D*W*H), mm	465*270*785

## TROUBLE SHOOTING

Problem	LCD/LED/Buzzer	Explanation / Possible cause	What to do
Unit shuts down automatically during startup process.	LCD/LED and buzzer will be active for 3 seconds and then complete off.	The battery voltage is too low (<1.91V/Cell)	1.Re-charge battery. 2.Replace battery.
No response after power on.	No indication.	The battery voltage is far too low.<1.4V/Cell) Internal fuse tripped.	1.Contact repair center for replacing the fuse. 2.Re-charge battery. 3.Replace battery.
Utility exist but the unit works in battery mode.	Input voltage is displayed as 0 on the LCD and green LED is flashing.	Input protector is tripped	Check if AC breaker is tripped and AC wiring is connected well.
	“AC” LED is flashing.	Insufficient quality of AC power. (Shore or Generator)	1.Check if AC wires are too thin and/or too long. 2.Check if generator (if applied) is working well or if input voltage range setting is correct. (UPS Appliance)
	“AC” LED is flashing.	Set “PV priority” as the priority of output source.	Change output source priority to Utility first.
When the unit is turned on ,internal relay is switched on and off repeatedly.	LCD display and LED are flashing	Battery is disconnected.	Check if battery wires are connected well.

Problem	LCD/LED/Buzzer	Explanation / Possible cause	What to do
Buzzer beeps continuously and red LED is on.	Fault code 14/60	Overload error. The inverter is overload 105% and time is up.	Reduce the connected load by switching off some equipment.
	Fault code 12	Output short circuited.	Check if wiring is connected well and remove abnormal load.
		Temperature of internal converter component is over 120°C.	Check whether the air flow of the unit is blocked or whether the ambient temperature is too high.
	Fault code 05/57	Internal temperature of inverter component is over 100°C.	
	Fault code 06	Battery is over-charged.	Return to repair center.
		The battery voltage is too high.	Check if spec and quantity of batteries are meet requirements.
Fault code 58	Fan fault	Replace the fan.	
The buzzer keeps beeping and the red light is on.	Fault code 10/11	Output abnormal (Inverter voltage below than 190Vac or is higher than 260Vac)	1.Reduce the connected load. 2.Return to repair center
	Fault code 01/02/03/07/08/09/15/16/53/59	Internal components failed.	Return to repair center.

